

3



The Singer logo on the frame reads correctly from left to right. The frame leans slightly back and the top frame / leg bolts use the rear holes in the legs.

Make sure the completed treadle is facing towards you, and looks as shown in the 2 pictures.

The Singer logos at the bottom of the legs face outwards



To ensure the sewing machine is correctly aligned with the flywheel complete the following:

1. Place the table top on the legs with the "Top Side / Table Front" label in the **front left hand corner** TOP SIDE
▼ **TABLE FRONT**
2. Secure the table with the supplied wood screws.
Screws fit up through the holes in the top of the legs and are screwed up into the **holes pre-drilled in the table.**



Wood screw x 4